

# SYNCRO VIEW

## Local LCD Control Panel Repeaters

### Features

- ▶ Up to 15 annunciators can be connected to each Syncro AS panel
  - ▶ Response or Syncro AS fire control panel.
  - ▶ Large liquid crystal display (240 x 64 pixels)
  - ▶ High brightness LED indications
  - ▶ Internal sounder
  - ▶ Replicates all Syncro panel controls
  - ▶ Simple, two-wire serial connection
  - ▶ Small enclosure
  - ▶ Removable electronics for easy installation
- ▶ 24V DC or 230V AC power options
  - ▶ Low power consumption
  - ▶ Multi language options
  - ▶ Connection monitored by Syncro fire control panel



### Description

The Syncro View fire alarm repeater provides a cost effective, simple and convenient method of extending the controls and indications of the Syncro AS fire alarm control panel to other locations.

The large, graphic LCD, brightness LED indicators and full set of controls duplicate the indications and controls on the Syncro AS fire alarm control panel at up to 15 additional locations via a (separate to the Syncro AS network) simple, two-wire serial data connection.


Ideal for locations where a control and indication point smaller than a full fire alarm control panel is required, the Syncro View is available in either a 24V DC powered option (which can be powered via an additional 2 cores from the Syncro AS control panel auxiliary 24V DC supply) or a 230V powered option with local battery back up

### Equipment

Product Code	Description	PSU	Size (mm)
K67000M1	Syncro View repeater panel		330 x 255 x 90
K67750M1	Syncro View repeater panel	750mA	330 x 255 x 90
K67001M1	Syncro View repeater panel c/w enable keyswitch		330 x 255 x 90
K67751M1	Syncro View repeater panel c/w enable keyswitch	750mA	330 x 255 x 90

## Specification

Construction	1.2mm mild sheet steel
IP Rating	IP30
Finish	Epoxy powder coated
Colour - lid & box	BS 00 A 05 grey - fine texture
Colour - controls plate & labels	Ral 7047 light grey - satin
Weight	4kg (standard panel)
Display	8 lines of 40 characters graphic LCD
Cable entry	5 x 20mm knockouts in top of box and 5 in rear
Mains supply (Mains models only)	230V AC +10% - 15% (20 Watts maximum)
24V supply (24V DC models only)	21 to 30V DC
Mains supply fuse	2 Amp, 20mm
Power supply rating	28V 750mA total (including battery charging)
Maximum ripple current	200 millivolts
Battery type (Yuasa NP)	Two 12 Volt 1.9Ah sealed lead acid in series
Battery charge voltage	27.6VDC nominal
Battery charge current	200mA maximum
Battery fuse	200mA, 20mm, glass
Maximum current draw from batteries	95mA
Quiescent current of panel in mains fail	0.03 Amps
Serial data connection	2 core RS485 (Up to 1200 metres total cable length)
Maximum terminal capacity	2.5mm <sup>2</sup>

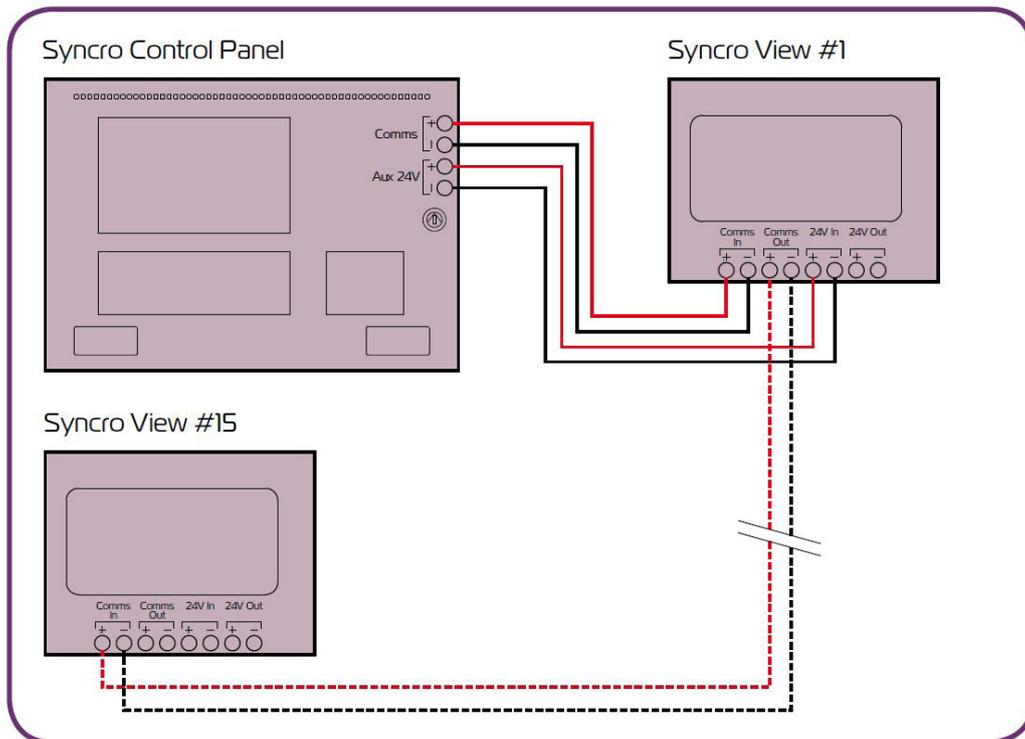

Datasheet DS43/09/17

For further information visit [www.kentec.co.uk](http://www.kentec.co.uk)

Kentec Electronics Ltd. reserves the right to alter the specification of its products from time to time without notice. Although every effort has been made to ensure the accuracy of the information contained in this document it is not warranted or represented by Kentec Electronics Ltd. to be a complete and up-to-date description.


# Syncro View

## Serial LCD Repeater Panel

(K67000M1, K67000F1, K67750M1, K67750F1  
K67001M1, K67001F1, K67751M1, K67751F1)

## Operation and Maintenance Manual

Man-1092 Issue 07 May 2016

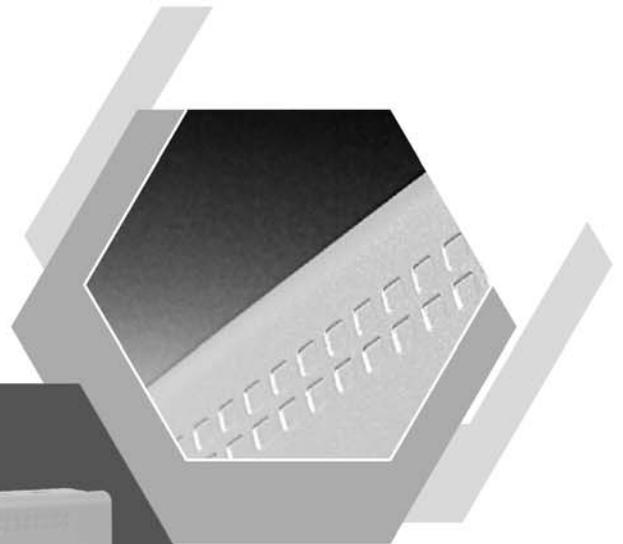

- 1. Introduction..... 3
- 2. Safety and mounting..... 3
  - 2.1 Safety..... 3
  - 2.2 Mounting..... 4
- 3. Technical specification ..... 5
- 4. Syncro View fascia ..... 6
- 5. Connecting to the circuit board ..... 7
- 6. Power and data connections ..... 7
- 7. Addressing the units ..... 7
- 8. Processor and watchdog reset switches..... 8
- 9. Connecting to the Syncro panel ..... 9
- 10. Connections to Syncro View..... 10
- 11. Adding a Syncro View to the Syncro panel ..... 11

## 1. Introduction

The Syncro View fire alarm annunciator is designed to provide indication and control of the status of the Syncro analogue addressable fire control panel at a remote or multiple remote locations or provide a more compact and pleasing user interface for the fire alarm system in areas where a large control panel would be obtrusive.

The Syncro View provides the same indications and controls as the Syncro fire control panel to which it is connected and can take full control of network systems if the control panel to which it is connected is configured to do so.

The Syncro View repeater panel will be overridden and can not take control of the panel to which it is connected if the main control panel is at access level 2.

For Syncro panels V5.90 and later or Syncro AS panels V5.22 and later, the Syncro View buzzer will follow the buzzer operation of the host panel to which it is connected. Therefore silencing the buzzer at the host panel will also silence the buzzer on the Syncro View repeater(s) connected to that panel.

For all other panel firmware versions that support the View repeater, silencing the panel buzzer at the host Syncro panel will not silence the View repeater buzzer. The View repeater buzzer will need to be locally silenced.

## 2. Safety and mounting

### 2.1 Safety

Suppliers of articles for use at work are required under section 6 of the Health and Safety at Work act 1974 to ensure as reasonably as is practical that the article will be safe and without risk to health when properly used.

An article is not regarded as properly used if it is used 'without regard to any relevant information or advice' relating to its use made available by the supplier.

This product should be installed, commissioned and maintained by trained service personnel in accordance with the following:

- (i) IEE regulations for electrical equipment in buildings
- (ii) Codes of practice
- (iii) Statutory requirements
- (iv) Any instructions specifically advised by the manufacturer

According to the provisions of the Act you are therefore requested to take such steps as are necessary to ensure that you make any appropriate information about this product available to anyone concerned with its use.

Some models of this equipment are designed to be operated from 230V AC supplies therefore all relevant safety precautions should be taken appropriate to equipment connected to mains voltages.

Syncro VIEW fire alarm annunciators are environmental class A and are designed for indoor use only at temperatures between  $-5^{\circ}\text{C}$  (+/- 3) and  $+40^{\circ}\text{C}$  (+/- 2) and with a maximum relative humidity of 95%.

The IP rating for the enclosure is IP30.

Operation outside of these limits may render the equipment unsafe.

## 2.2 Mounting

Surface mounting units should be mounted on a dry, flat surface, at eye height to the display and in a level position such that the enclosure is not distorted.

Screws or bolts of a minimum of 4mm diameter must be used to mount the enclosure in all three mounting positions.


Suitable fixings should be used at all fixing points such that the unit is securely mounted and is not liable to move once fixed.

Units should not be mounted in another enclosure or near sources of excessive heat.

Cables should be connected using suitable cable glands. If additional cable entry points are required, all swarf and debris caused by drilling of additional cable entries must be cleared before power is applied.

Surface Mounting

Flush Mounting

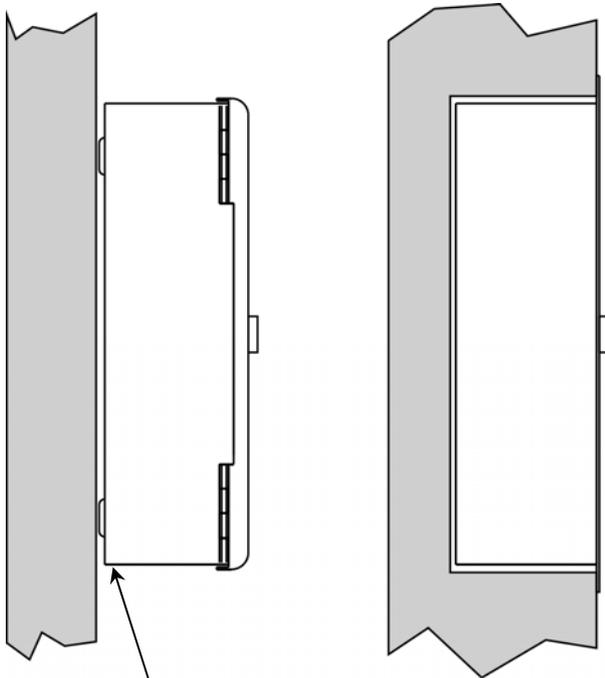

Fix to flat surface  
using suitable wall  
plugs.


### 3. Technical specification

Table 1 - Electrical specifications


Construction	18SWG Mild steel - IP30 rated
Cable entry	20mm knockouts 5 in top, 5 in rear and 1 in the side
Finish	BS 00-A-05 light grey, fine texture.
Weight	5Kg maximum
Mains supply (Mains powered models only)	230V AC +10% - 15% (20 Watts maximum)
Mains supply fuse (Mains powered models only)	2 Amp, 20mm, glass HRC
Power supply rating (Mains powered models only)	0.75 Amps total including battery charge 28V +/- 2V
Maximum ripple voltage (Mains powered models only)	200 millivolts
Battery type (Yuasa NP) (Mains powered models only)	Two 12 Volt 1.9Ah sealed lead acid in series
Battery charge voltage (Mains powered models only)	27.6VDC nominal
Battery charge current (Mains powered models only)	0.2A maximum
Battery fuse (Mains powered models only)	200 milliamp, 20mm, glass
Maximum current draw from batteries (Mains powered models only)	0.095 Amps
24V supply (24V DC models only)	21 to 30V DC
Quiescent current of panel in mains fail	0.03A
Serial data connection	2 core RS485 (Up to 1200 metres total cable length)
Maximum terminal capacity	2.5mm <sup>2</sup>
Max number of units on each Syncro panel serial bus	15
Maximum number of units to be powered from Syncro Aux 24V output	4

#### 4. Syncro View fascia

K67001 and K67750 models with enable controls keyswitch

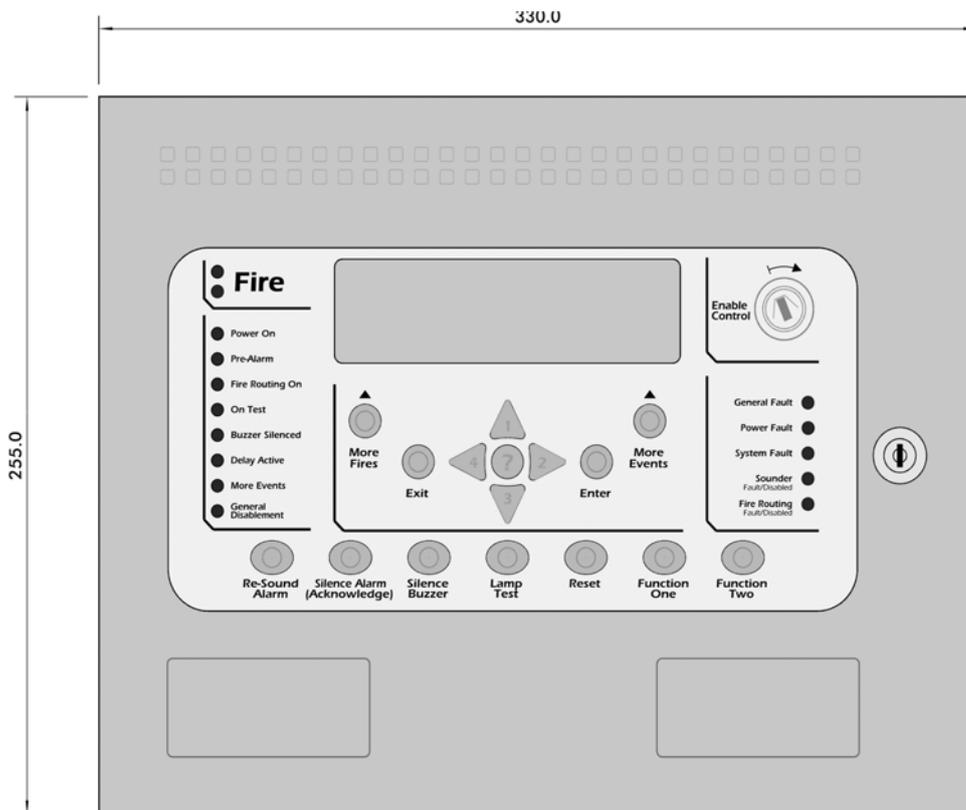

K67000 and K67751 models without enable controls keyswitch.

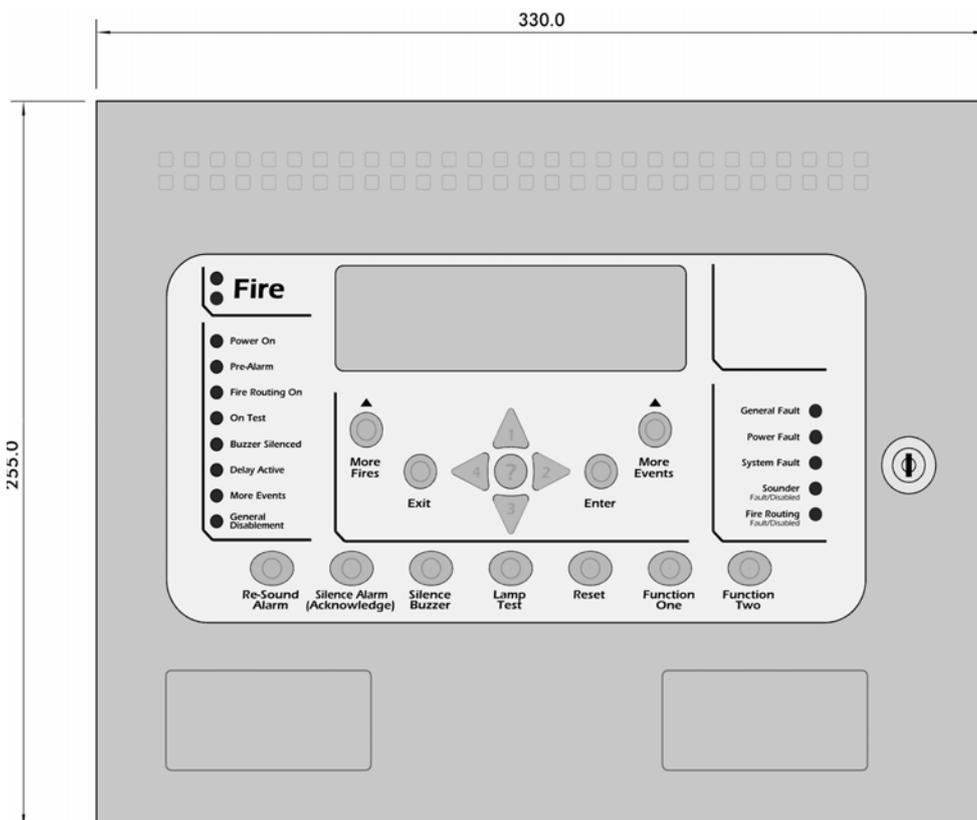

## 5. Connecting to the circuit board

All connections for field wiring are to a single row of terminals along the bottom of the circuit board.

Shielded fire alarm cable such as FP200 and metal cable glands must be used for all connections to the unit. The resistance of any core of the data cable must not exceed 25 ohms. The shield of the cable must be bonded securely to the enclosure via the metal gland.

Wiring should enter the enclosure at the top or back of the unit using the knockouts provided and be formed tidily to the appropriate terminals.

Terminals are capable of accepting wires of up to 2.5mm<sup>2</sup>.

Wiring must not go across the front of the circuit board. If cable entries need to be in positions other than at the knockouts provided, wiring must be fed well away from the surface of the circuit board.

## 6. Power and data connections

Each unit requires two cores for power and two cores for data transmission to and from the control panel. A four core cable may be used for these connections. All of these connections are polarity conscious and care should be taken to match the polarity with the corresponding terminals at the control panel. Mains powered versions require only a two core cable to the control panel and a local mains supply.

### Data Termination

Up to 15 units can be connected to a Syncro control panel. In and out terminals for data and 24V DC are provided on each unit.

All units are supplied with a push on jumper fitted at position J3 on the left hand side of the PCB. This jumper connects a terminating resistor which needs to be in place at the last unit on the data line. If more than one unit is to be fitted, then the jumpers must be removed from all units except the last one.

If there is only one unit fitted then the jumper should be left in place. The COMMS LED will flash quickly while the unit is communicating correctly with the control panel and will be off if the unit is disconnected or connected incorrectly.


## 7. Addressing the units

To enable the control panel to know whether any units that should be connected have been disconnected and indicate a fault condition, each unit must be allocated an address. The address switch should never be set with all switches off.

This is done by setting a binary number from 1 to 15 on the 4 way, DIL switch located at the bottom of the PCB.

The order of the addresses is not important but each unit must be allocated a different address.

The switch settings for each of the addresses are shown below.

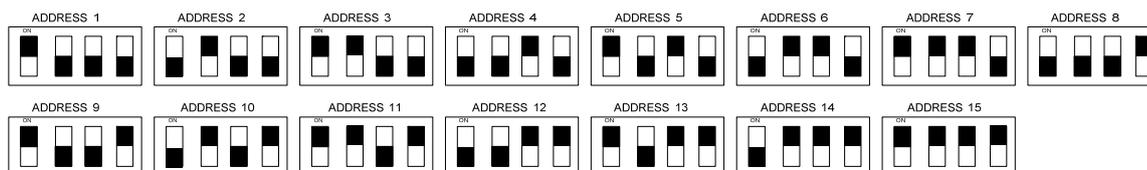


## 8. Processor and watchdog reset switches


The Syncro VIEW is controlled by a microprocessor, which will re-start itself and continue to run if it stops for any reason due to severe electrical interference such as an electrical storm. To ensure that the unit is not being subjected to continual, undue interference which may effect its proper operation, a watchdog (W/DOG) LED indicator is latched on and a fault condition signalled to the control panel.

If a processor re-start has occurred. this latched fault condition will need to de reset by pressing the W//DOG RESET button on the bottom of the PCB.

A switch is also provided to manually re-start the processor PROC RESET. This switch can be used while the units are connected to the system to ensure that the unit starts up and establishes communication with the panel in a controlled and expected manner.

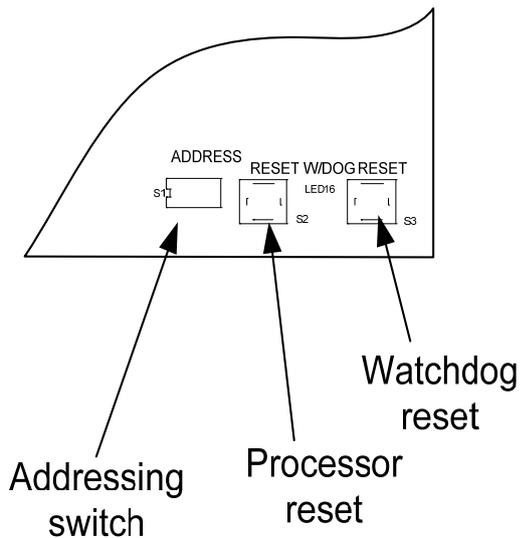


## 9. Connecting to the Syncro panel

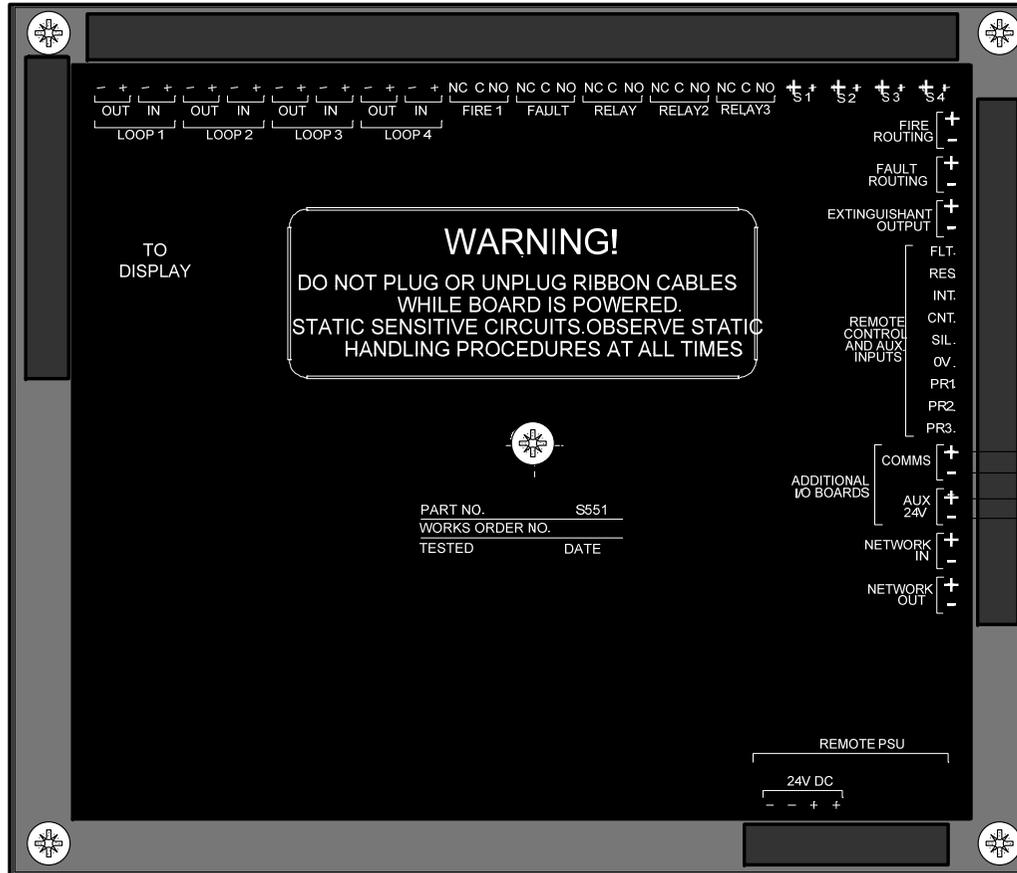


To Syncro View repeater COMM 1 + terminal  
 To Syncro View repeater COMM 1 - terminal  
 To Syncro View repeater 24V + terminal  
 To Syncro View repeater 0V terminal

**NOTE**  
 WIRING TO 24V+ AND 0V  
 TERMINALS NOT REQUIRED ON  
 MAINS POWERED VERSIONS

## 10. Connections to Syncro View

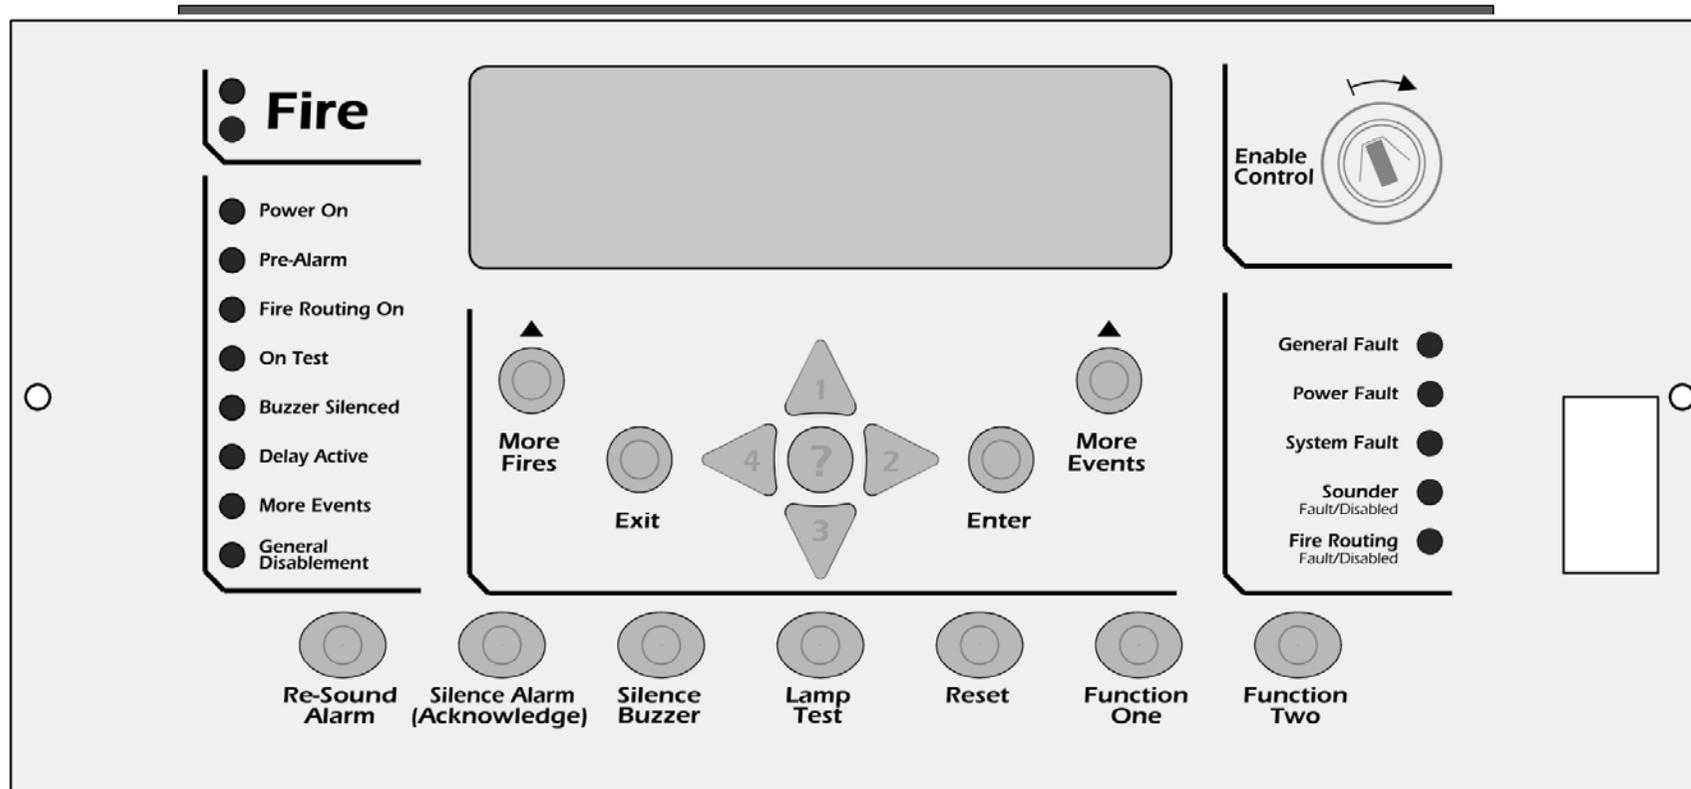

NOTE  
WIRING TO 24V+ AND 0V  
TERMINALS NOT REQUIRED  
ON MAINS POWERED  
VERSIONS

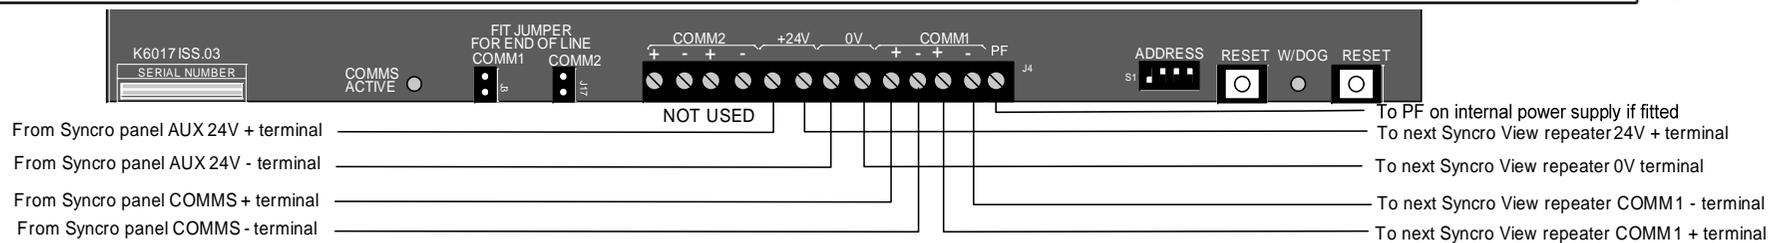


## 11. Adding a Syncro View to the Syncro panel

The Syncro View repeater must be added to the system by configuring the Syncro panel using the Loop Explorer configuration utility.


Click on the site name in the left hand window pane to show the option to add panels or repeaters to the system.

If no panels are already added to the configuration then select the type of panel required. To add a Syncro view repeater click on the View Repeater Icon.

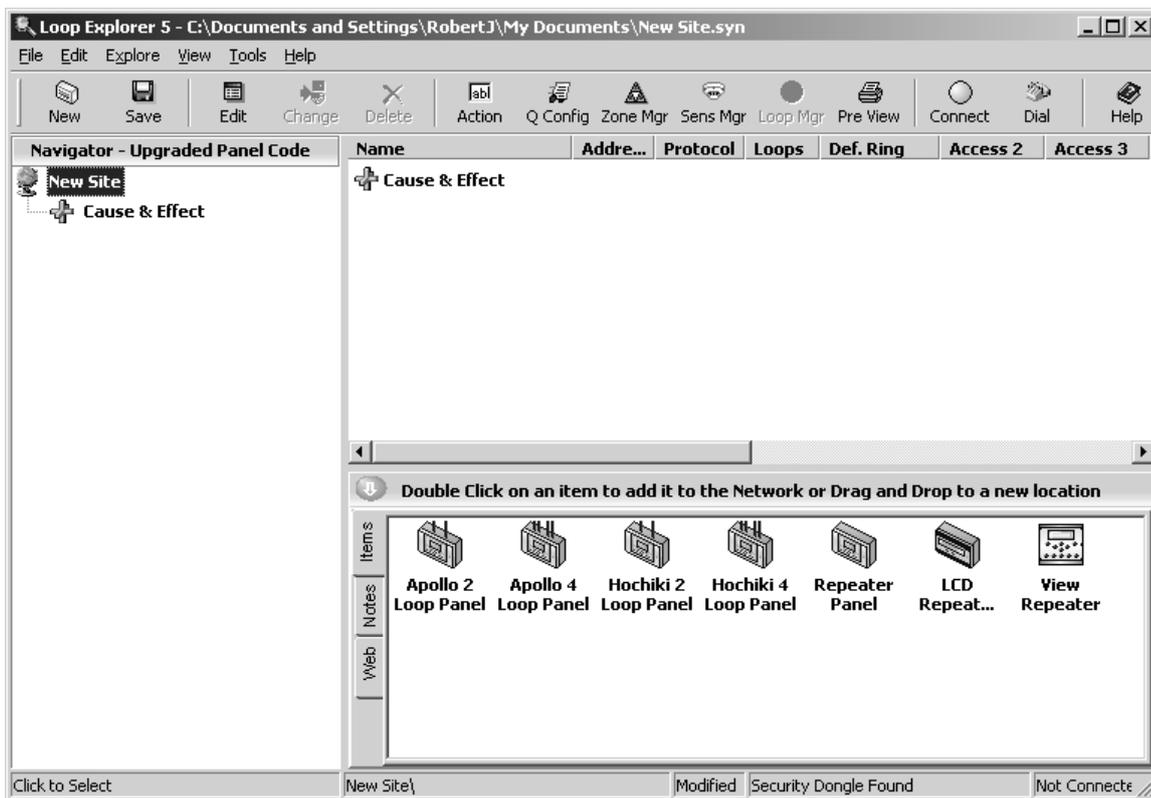


To add a Syncro view repeater, double click on the View Repeater Icon.


Double click on the panel to which the View repeater is to be connected.

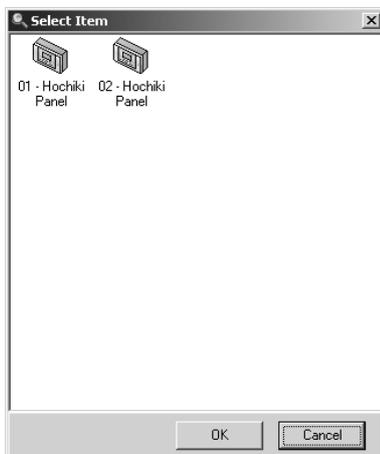

The Syncro View repeater is now shown in the centre window pane.

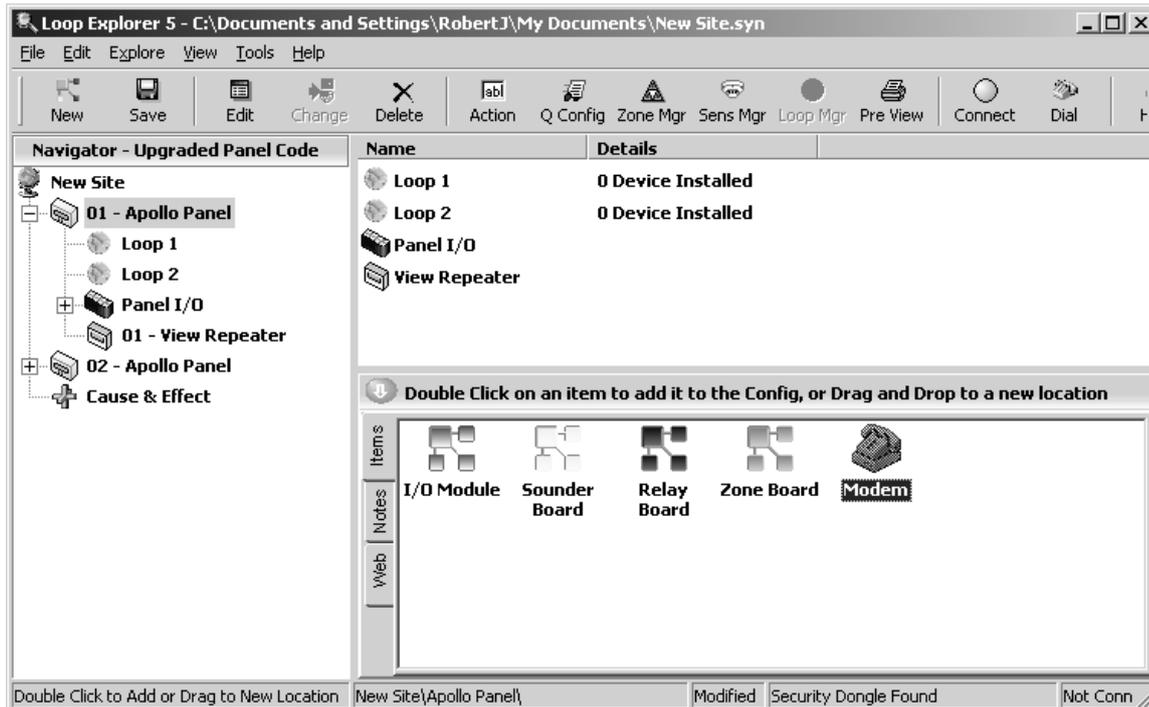

Right click the Syncro View and select “edit settings” to give the Syncro View a panel name (location) and an address on the serial bus. This address should be different for each Syncro View added and different to any other I/O boards that may exist on the serial bus.

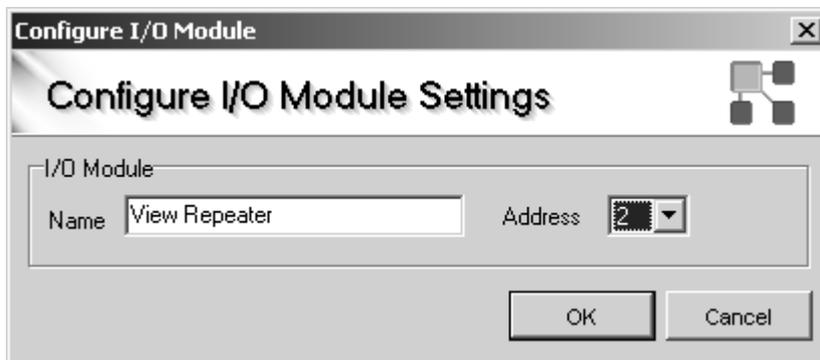

Once the configuration file has been loaded into the panel the panel will now expect to see a Syncro View at the address allocated to it and will show a fault condition if the Syncro View is not fitted or is removed.



# EU Declaration of Conformity



## Syncro View

Kentec Electronics Limited declares that the products listed below conform to the essential requirements of the Low Voltage Directive 2014/35/EU and EMC Directive 2014/30/EU and are manufactured at an ISO9001 and ISO14001 certified facility. This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of manufacture: Kentec Electronics Limited  
Units 25-26  
Fawkes Avenue  
Questor  
Dartford Kent DA1 1JQ

Product Description: K67001M1 Syncro View, Local LCD Repeater Panel With Enable Keyswitch

### Standards

EN62368-1: 2018	Audio/video, information and communication technology equipment safety requirements.
EN61000-6-3:2007:+A1:2011	Electromagnetic compatibility (EMC) Generic standards. Emission standard for residential, commercial and light-industrial environments. Emissions, Class B.
BS EN 50130-4:2011+A1:2014	Alarm systems. Electromagnetic compatibility. Product family standard: Immunity requirements for components of fire, intruder, hold up, CCTV, access control and social alarm systems

Authorised by:

Ray Turner  
Compliance Director

Issued: 20/12/2020  
Dartford, England